 


ABC

D: Muss von Erwachsenen montiert werden.
GB: Must be assembled by an adult.
F: A monter par un adulte.
I: Deve essere montato da un adulto.
NL: Dient door volwassenen gemonteerd worden.
E: Debe ser montado por personas adultas
P: Tem de ser montado por adultos.
DK: Skal samles af voksne
S: Måste monteras av vuxna .

FIN: Ainoastaan aikuisen koottavaksi.
N: Må monteres av voksne.
H: Csak felnőtt felügyelete mellett használható.
CZ: Montáž provede dospělá osoba.
PL: Musi być montowany przez dorosłych.
GR: Πρέπει να συναρμολογηθεί από ενήλικες.
TR: Yetişkinler tarafından kullanılmalıdır.
SI: Postavitev izključno s strani odraslih oseb.
HRV: Postavljanje je dozvoljeno isključivo odraslim osobama.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
SK: Montovať smie len dospelá osoba.
BG: Трябва да се монтира от възрастни лица.
RO: Trebuie montat de adulți.
UA: Встановлюється дорослими.
EST: Paigaldama peavad täiskasvanud.
LT: Tik suaugusieji gali sumontuoti.
LV: Montāža jāveic pieaugušajiem.
AR: يتعين تجميعه من قبل أحد البالغين.

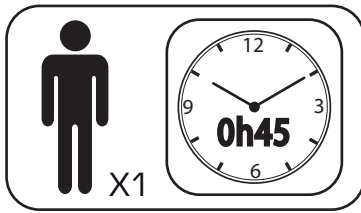

F: Non fournis
GB: Not provided
D: Nicht mitgeliefert
NL: Niet geleverd
E: No incluidas
P: Não incluídas
I: Non incluse
DK: Medfølger ikke
S: Medföljer ej

FIN: Eivät sisälly
N: Ikke inkludert
H: Nincs benne
PL: Nie dostarczone.
CZ: Neobsaženo
GR: Δεν περιέχονται
RUS: Не входит в поставку
TR: Dahil değildir
SI: Ne vsebuje

HRV: Ne sadrži
SK: Nie je súčasťou
BG: Не се съдържа
RO: Nu sunt conținute
UA: Не містять
EST: Ei ole komplektis
LT: Nepriđėtos.
LV: Nav pievienotas
AR: غير وارد

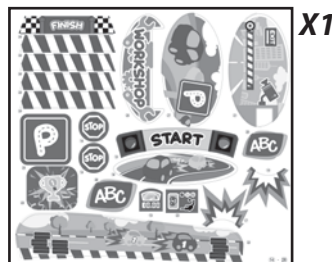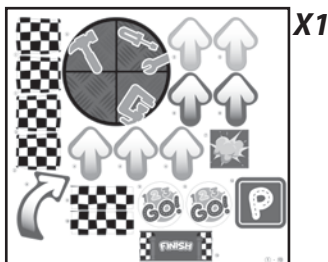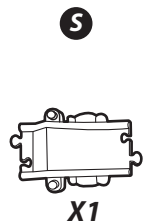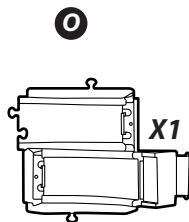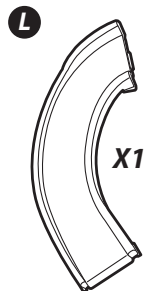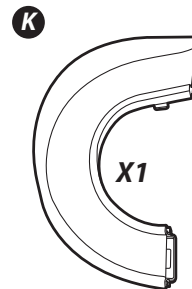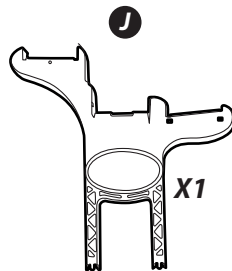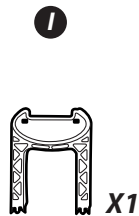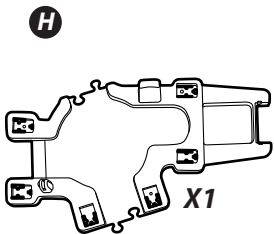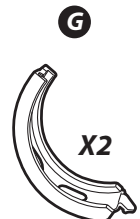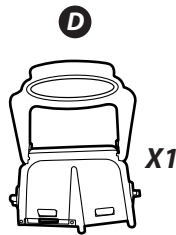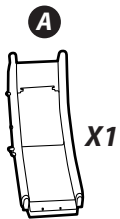


Jays Jump N Fun Tower


www.dickietoys.de
www.dickietoys.com

20 411 7002
H1123 P1/4

 
1

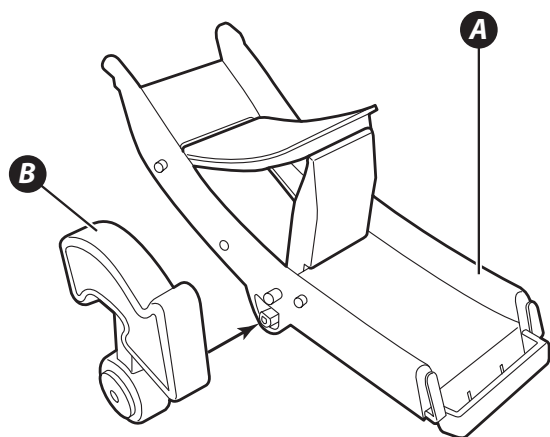


2

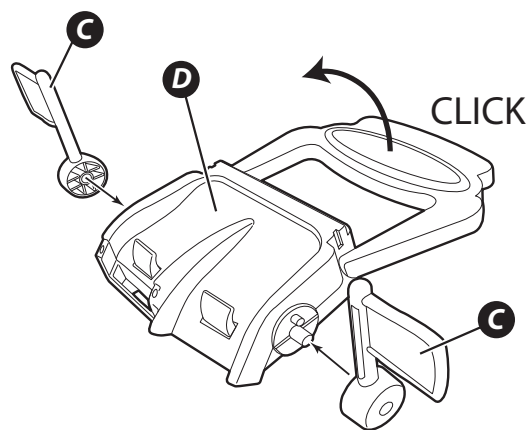 


3

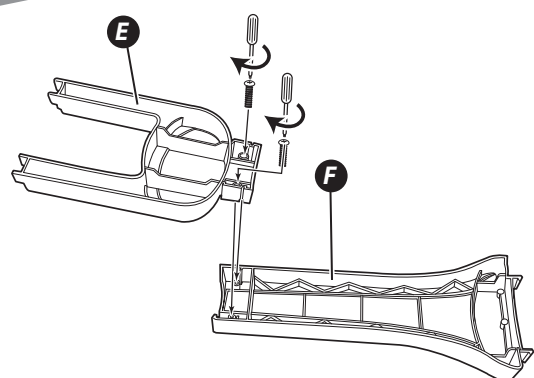 

4

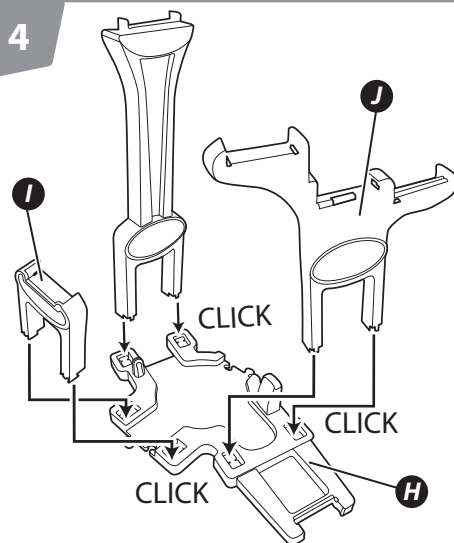 

5

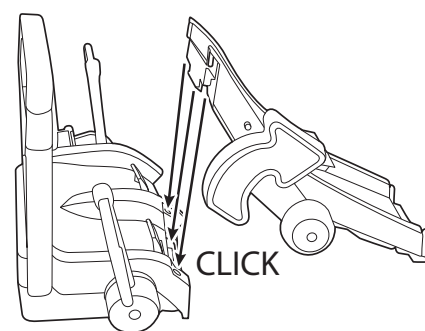 

6

