


DISASSEMBLY OF MOTOR AND CHANGING ROTOR

Remove brush springs first, then pull out brushes from the end bell. Loosen end bell screws and remove end bell as shown below.

★Note polarity direction of end bell.

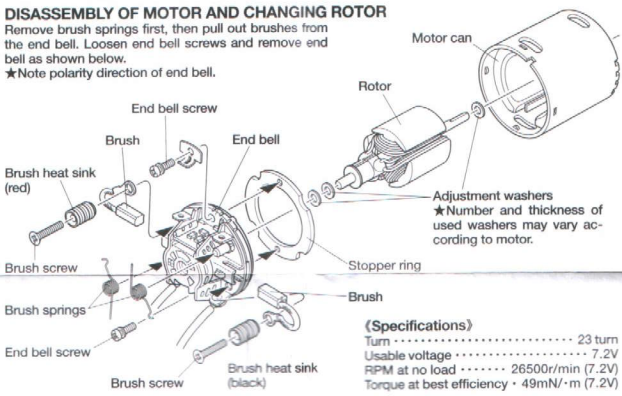

(Specifications)

Turn	23 turn
Usable voltage	7.2V
RPM at no load	26500r/min (7.2V)
Torque at best efficiency	49mN·m (7.2V)