

Betriebsanleitung Instruction manual



Itemnr.: 50 090 5081



For Germany only:
Service-Hotline:
Mo - Do 8.00 – 17.00 Uhr
Fr 8.00 – 14.30 Uhr

01805-73 33 00

14 ct/min
CARSON-MODEL SPORT
Abt. Service
Mittlere Mutsch 9
96515 Sonneberg



Achtung!/ Attention!


Use only rechargeable 7.2 V NiMH batteries.
If the startermotor stops automaticly, wait a few seconds.
Be carefully of the rotating parts. Risk of injury!
Only for use to start your nitro-engine.

Nur wiederaufladbare 7,2 V NiMH Akkupacks verwenden.
Wenn der Starter-Motor automatisch stoppt, bitte ein paar Sekunden warten.
Bitte achten Sie auf rotierende Teile. Verletzungsgefahr!
Das Gerät nur zum Starten von Nitro-Motoren verwenden.


Benötigtes Zubehör: Not included:





50 060 8022 NiMH battery 7.2 V / 3000 mAh
50 060 8022 Akkupack 7,2 V NiMH 3000 mAh

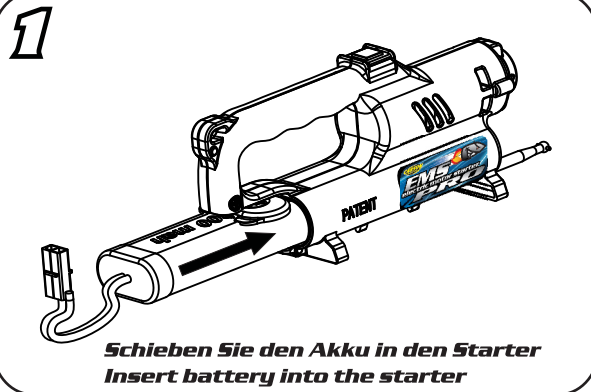


Battery installation Akkupack einlegen

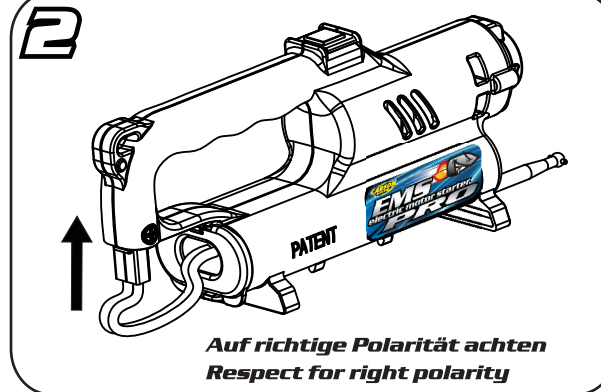


Battery connect Akkupack anschließen

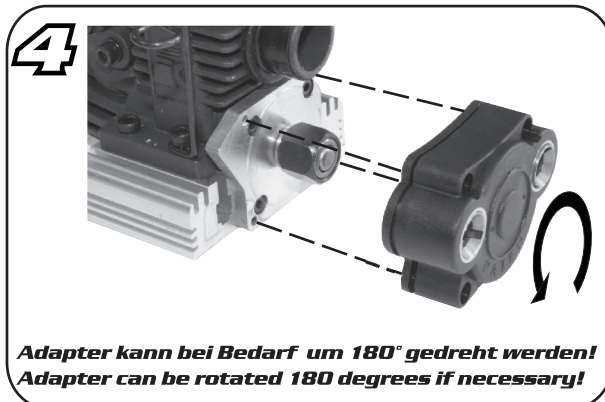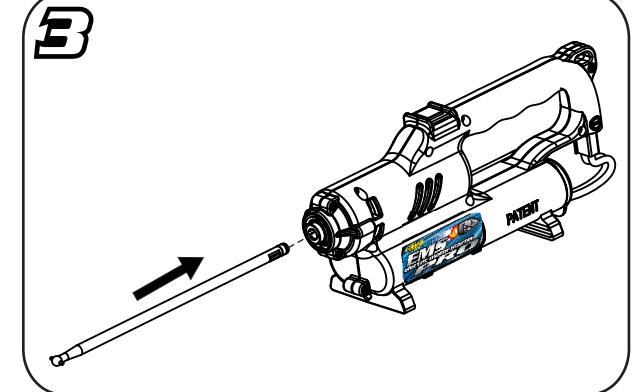

Mounting engine-adapter Motor-Adapter montieren

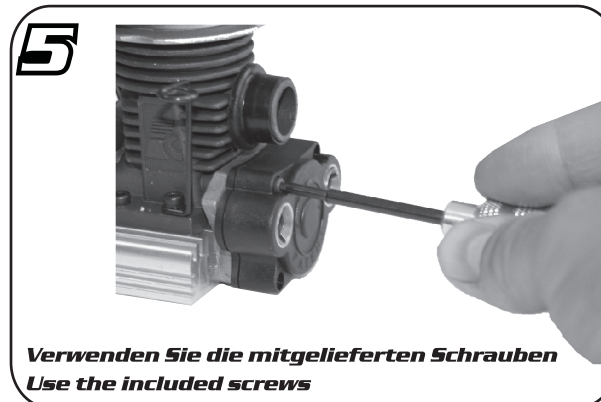

Fix engine-adapter Motor-Adapter anschrauben

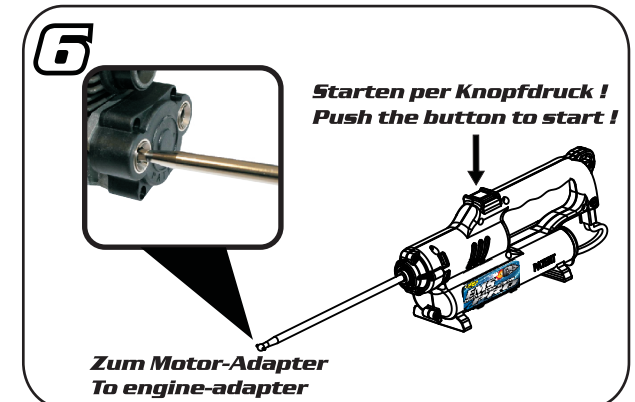

Start the engine Starten des Motors

Achten Sie auf ausreichend Abstand zwischen dem Motor-Adapter und drehende Antriebsteile des Fahrzeuges. Für CV-10 Onroad nicht geeignet!!!
Make sure you have enough distance between the motor adapter and rotating drive components of the model. For CV-10 Onroad not suitable!