

# PROGRAM CARD



— ITEM —

— VALUE —

ITEM

VALUE

RESET

OK

## TABLE A

Items for S5,S8 & CRAWLER RTR ESC

### 1. Running Mode

- (1) Forward with Brake
- (2) Forward/Reverse with Brake
- (3) Forward and Reverse

### 2. Drag Brake Force

- (1) 0%    (2) 5%    (3) 10%    (4) 20%
- (5) 40%    (6) 60%    (7) 80%    (8) 100%

### 3. Low Voltage Cut-Off Threshold

- (1) Non-Protection    (2) 2.6V/Cell
- (3) 2.8V/Cell    (4) 3.0V/Cell
- (5) 3.2V/Cell    (6) 3.4V/Cell

### 4. Start Mode(Punch)

- (1) Level1    (2) Level2    (3) Level3
- (4) Level4    (5) Level5    (6) Level6
- (7) Level7    (8) Level8    (9) Level9

\* Option (5)-(9) unavailable for CRAWLER RTR ESC.

### 5. Max Brake Force

- (1) 25%    (2) 50%    (3) 75%
- (4) 100%    (5) Disable

## TABLE B

Items for S18,S16,S10 RTR ESC

### 1. Running Mode

- (1) Forward with Brake
- (2) Forward/Reverse with Brake

### 2. Drag Brake Force

- (1) 0%    (2) 5%    (3) 10%    (4) 15%
- (5) 20%    (6) 25%    (7) 30%    (8) 40%

### 3. Low Voltage Cut-Off Threshold

- (1) Non-Protection    (2) 2.6V/Cell
- (3) 2.8V/Cell    (4) 3.0V/Cell
- (5) 3.2V/Cell    (6) 3.4V/Cell

### 4. Start Mode(Punch)

- (1) Level1    (2) Level2
- (3) Level3    (4) Level4

### 5. Maximum Brake Force

- (1) 25%    (2) 50%
- (3) 75%    (4) 100%