


PROGRAM CARD

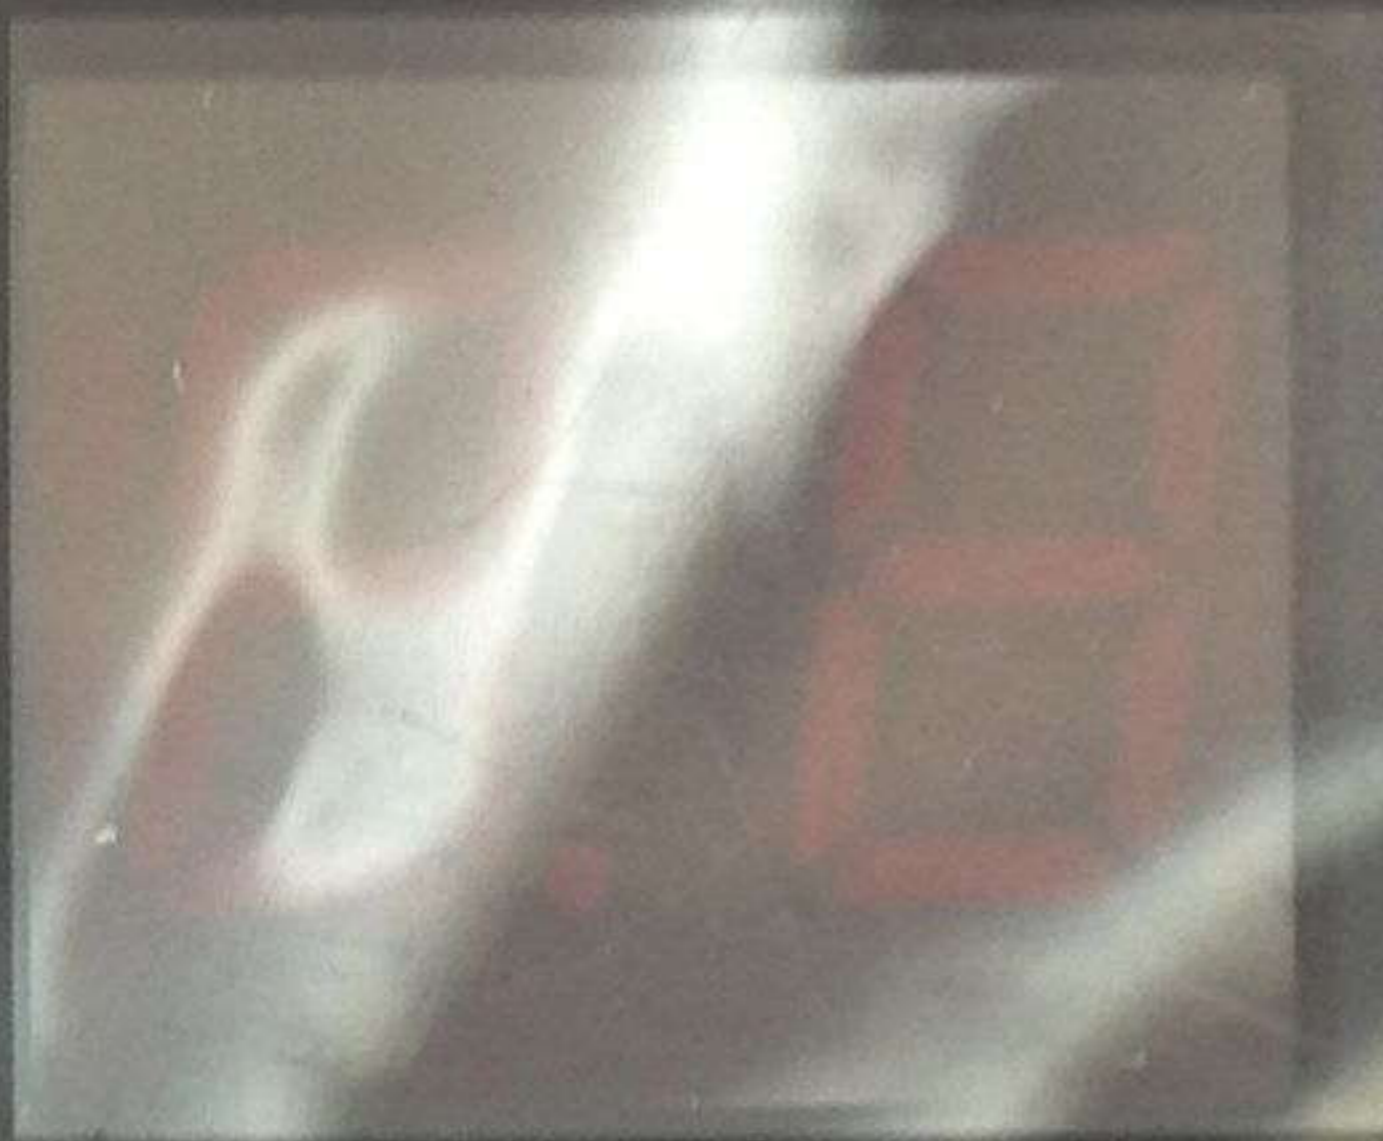

— ITEM —

- VALUE -

ITEM

VALUE

RESET

OK

Basic Setting

1. Running Mode

- (1) Forward Only with Brake
- (2) Forward/Reverse with Brake
- (3) Forward and Reverse

2. Drag Brake Force

- (1) 0% (2) 5% (3) 10% (4) 20%
- (5) 40% (6) 60% (7) 80% (8) 100%

3. Cut-Off Threshold

- (1) Non-Protection (2) 2.6V/Cell
- (3) 2.8V/Cell (4) 3.0V/Cell
- (5) 3.2V/Cell (6) 3.4V/Cell

4. Start Mode(Punch)

- (1) Level1 (2) Level2 (3) Level3
- (4) Level4 (5) Level5 (6) Level6
- (7) Level7 (8) Level8 (9) Level9

Advanced Setting

5. Brake Force

- (1) 25% (2) 50% (3) 75% (4) 100%

6. Reverse Force

- (1) 25% (2) 50% (3) 75% (4) 100%

7. Initial Brake Force

- (1) = Drag Brake Force (2) 0%
- (3) 20% (4) 40%

8. Neutral Range

- (1) 6% (2) 9% (3) 12%

9. Timing

- (1) 0° (2) 3.75° (3) 7.5° (4) 11.25°
- (5) 15° (6) 18.75° (7) 22.50° (8) 26.25°

10. Over-heat Protection

- (1) Enable (2) Disable

11. Motor Rotation

- (1) Counter Clockwise (2) Clockwise

12. Lipo Cells *

- (1) Auto Calculate (2) 2 Cells [5]
- (3) 3 Cells [6] (4) 4 Cells [8]
- (5) 5 Cells [10] (6) 6 Cells [12]

Available For Car ESC
SOFTWARE VERSION 2.0

RoHS CE

* The number in [] is available for High Voltage ESC