


0708 -2.4G Remote Control MINING TRUCK Instruction Manual

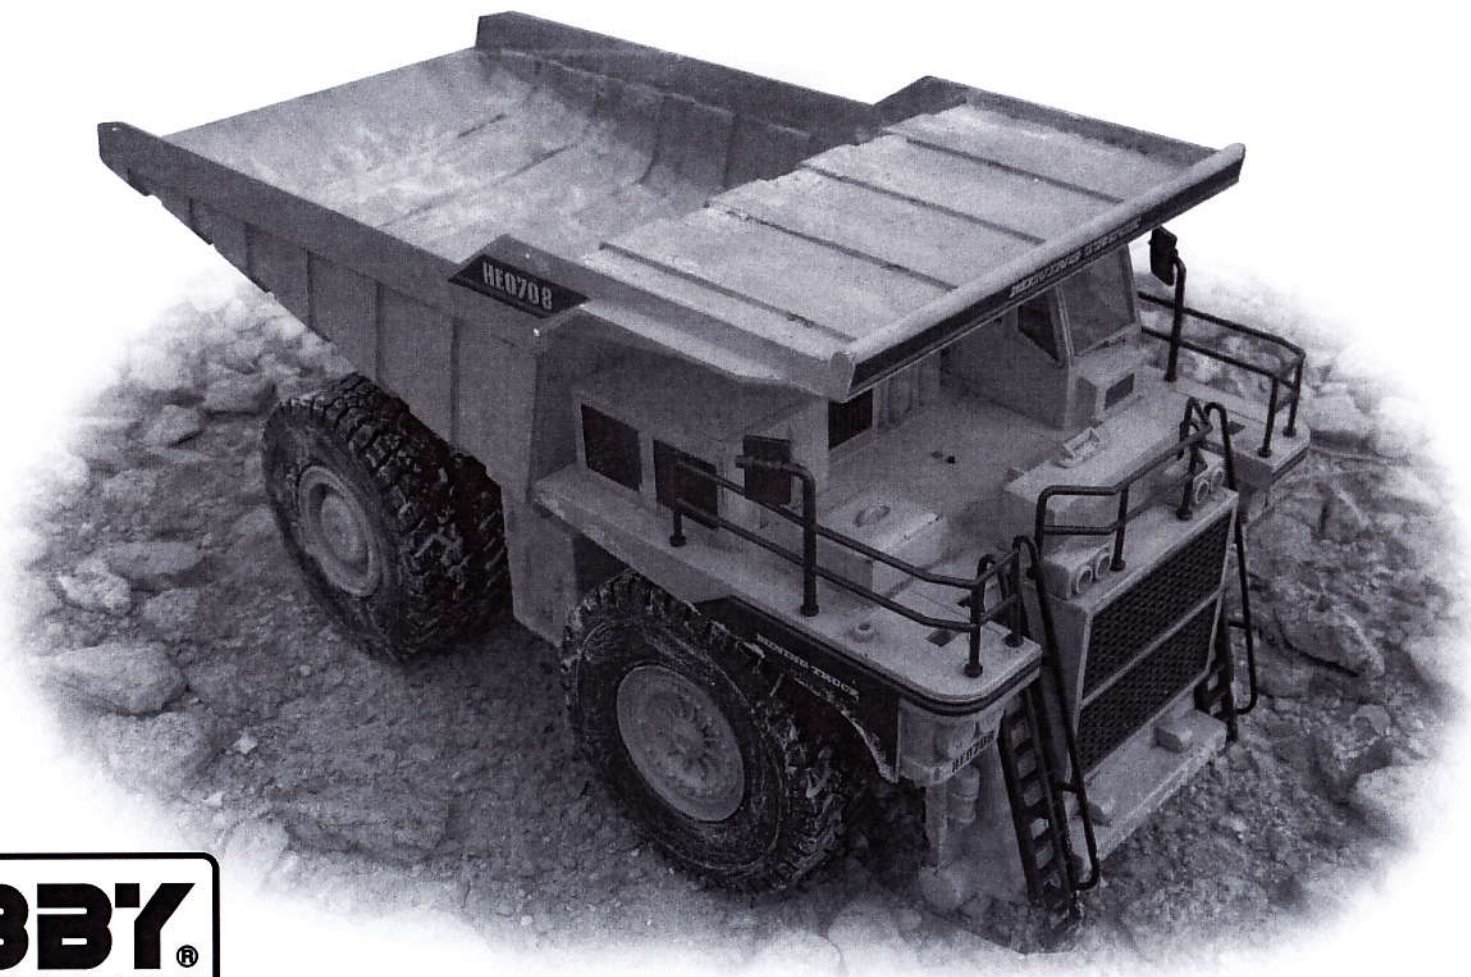

Hobbyengine Model Limited

Address: Rm 619, 6/F., Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon, Hong Kong.

Website: www.hobbyengine.com.hk

PRODUCT FEATURES:

On scale MINING TRUCK model with 2.4G Radio control system.

Hidden antenna on MINING TRUCK & remote controller.

Aged decoration-traces of oil,rusted,mudded.

Full digital proportional control

Climb up to 20 degrees.




Independent loader control.

INCLUDED

1. 0708 MINING TRUCK returned from site.....1
2. 2.4G Digital Radio Controller.....1
3. 4.8V X 800mAh Rechargeable Battery.....1
4. D.C 9V, 200mA, 1.8VA charger.....1

INSTALL BATTERY TO REMOTE CONTROL





1. Turn screw anti-clockwise on battery door to open.
2. Install batteries follow polarities crafted inside battery compartment.
3. Cover the battery door and tighten the screw clockwise.
4. Push the slide switch on front panel to "ON" mark. A Red LED below will be luminate to show installation was activated.

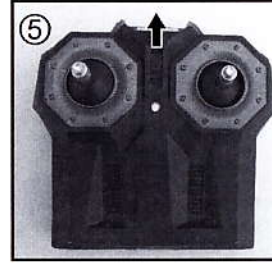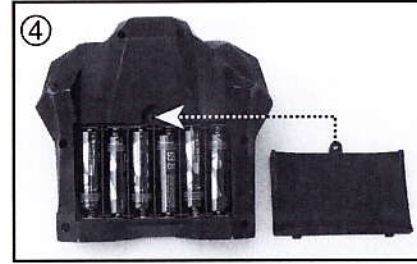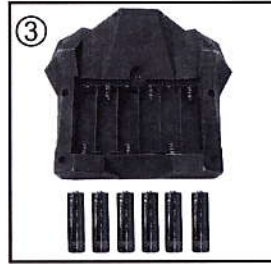

INSTALL BATTERY ON MINING TRUCK





1. Turn screw anti-clockwise on battery door under MINING TRUCK to open.
2. Plug with fully charged battery pack on socket in battery compartment.
3. Cover the battery door and tighten the screw clockwise.
4. Activate MINING TRUCK by sliding switch to "ON"

REMARKS: Charge the battery pack 6 hours for the first time, 4 hours from 2nd time.

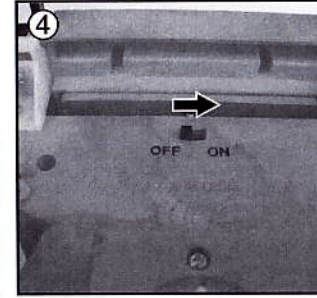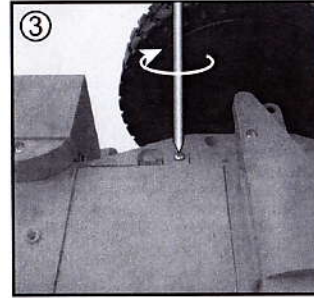
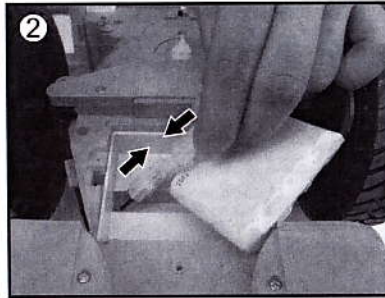
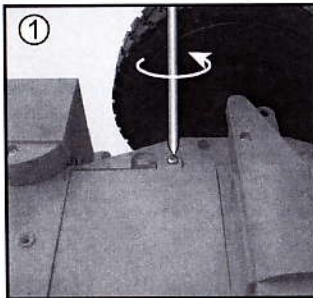


MATCH THE REMOTE CONTROLLER TO THE MINING TRUCK


1. Slide remote controller power switch to "ON". LED luminated to Red.
2. Slide MINING TRUCK power switch to "ON".
3. Press "MATCHING" button on top deck of MINING TRUCK. The LED on side will be flashed for 5 seconds.
4. LED stop flashing, the MINING TRUCK is already matched with controller and ready to work.

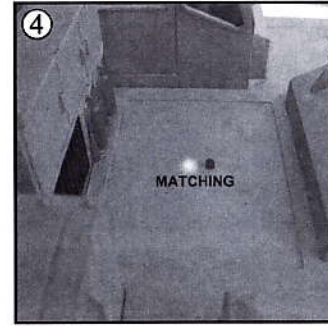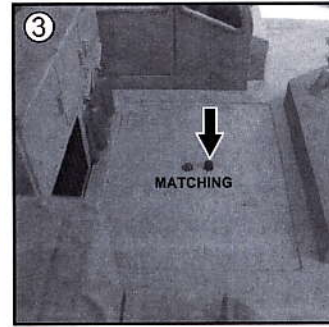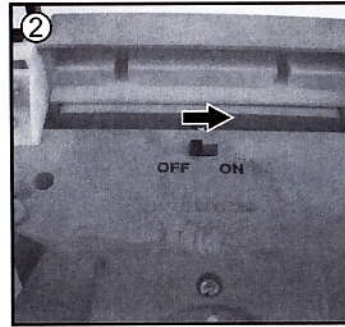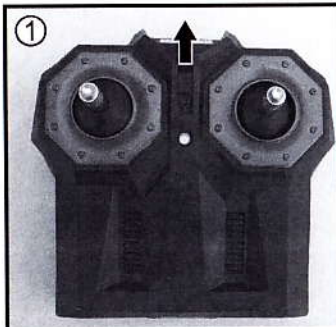


2.4G REMOTE CONTROLLER BUTTON MAP

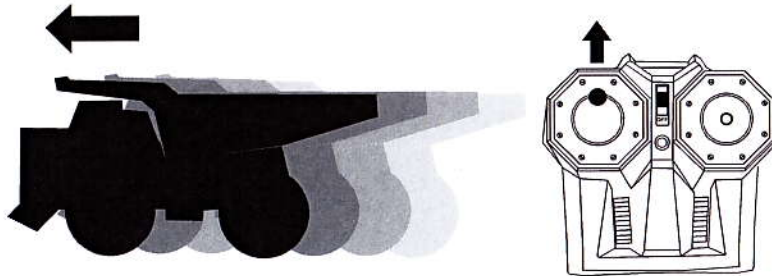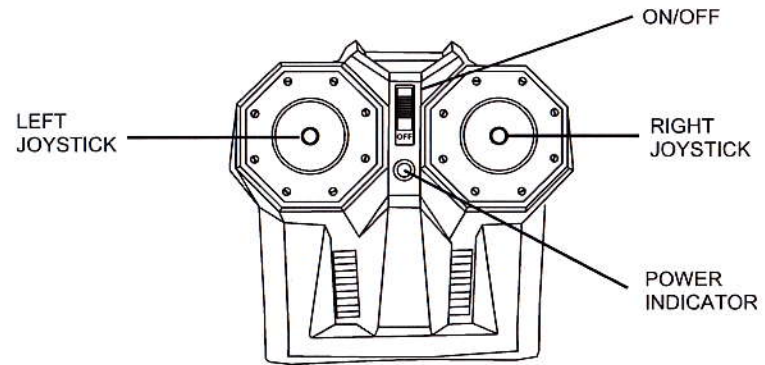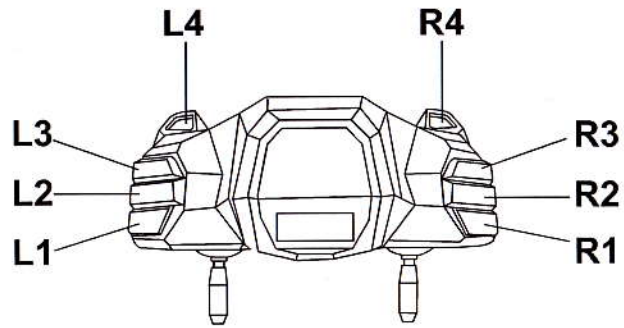


Forward by pushing left joystick to the front.

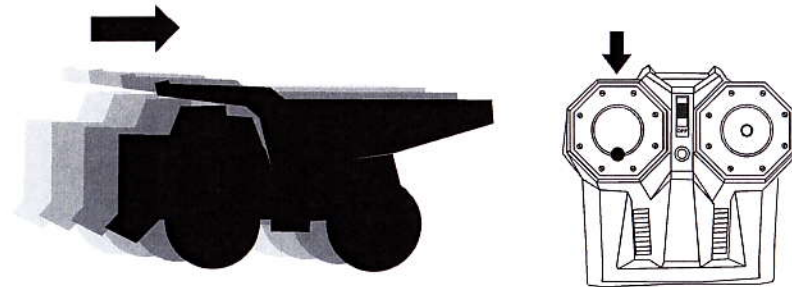


Backward by pushing left joystick to the back.

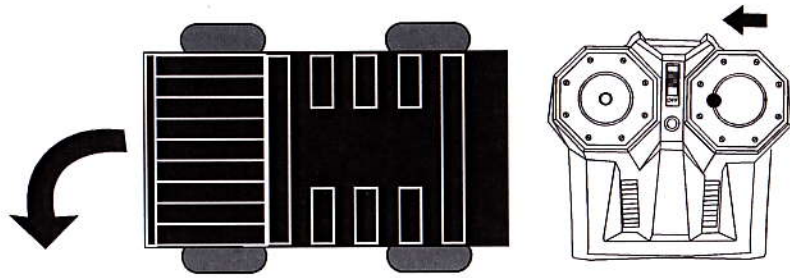

Left turn by pushing right joystick to left.

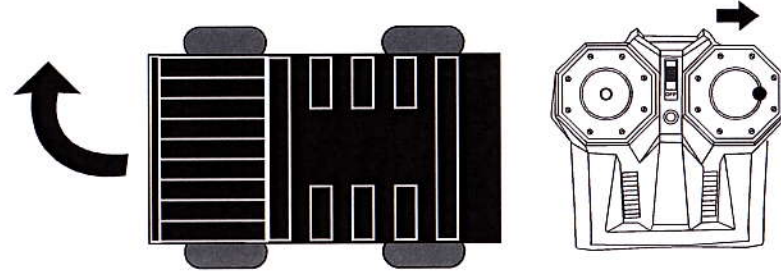


Right turn by pushing right joystick to right.

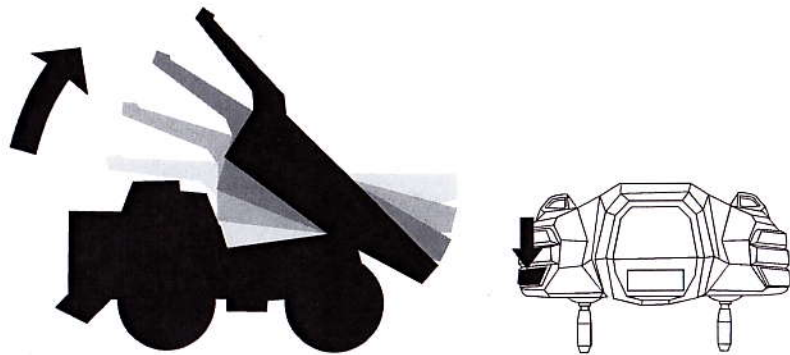

6

Tilt up dumper by pressing (L1) button.

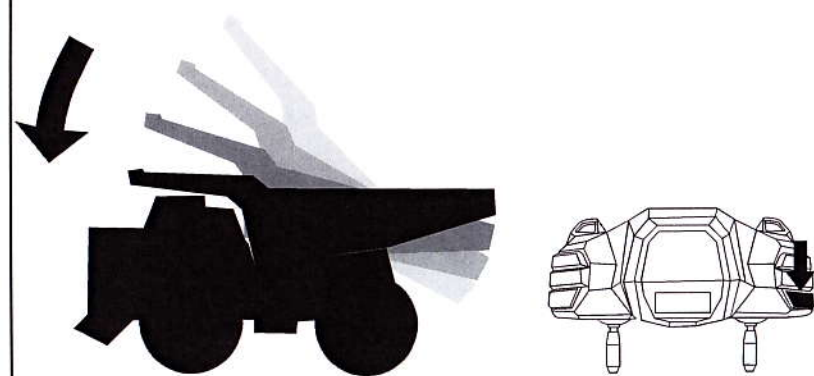

Tilt down dumper by pressing (R1) button.