





Mercedes Benz X-Klasse

ASSEMBLED READY-TO-RUN MODEL



Montageanleitung / Assembly

MONTAGEANLEITUNG • ASSEMBLY INSTRUCTIONS

DIFFERENZIAL VORNE/HINTEN • DIFFERENTIAL FRONT/REAR

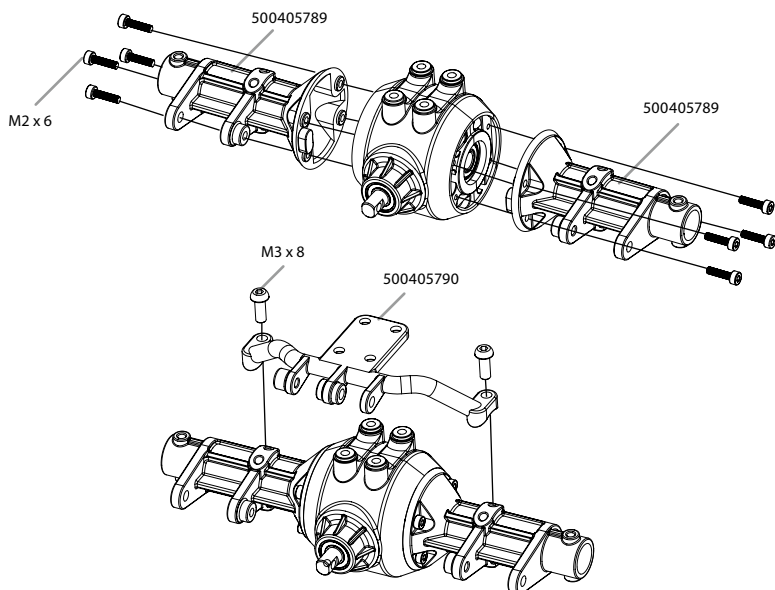
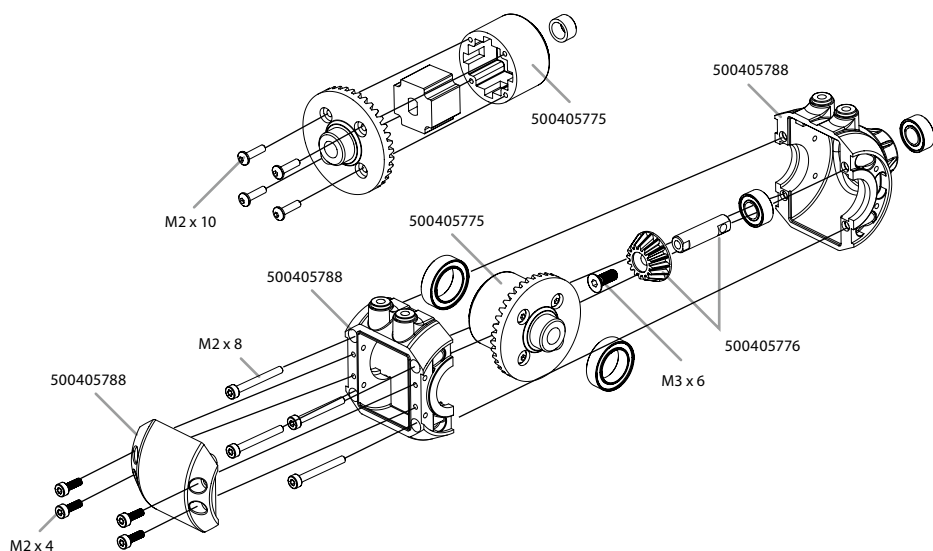




MONTAGE VORDER/HINTERACHSE • ASSEMBLING FRONT/REAR UNIT

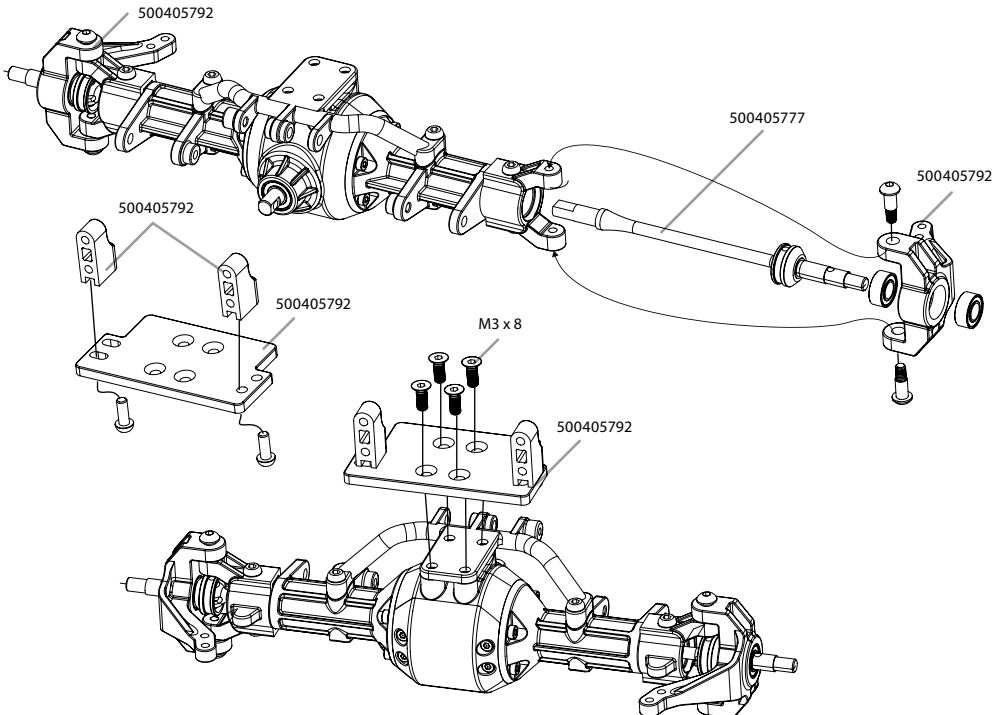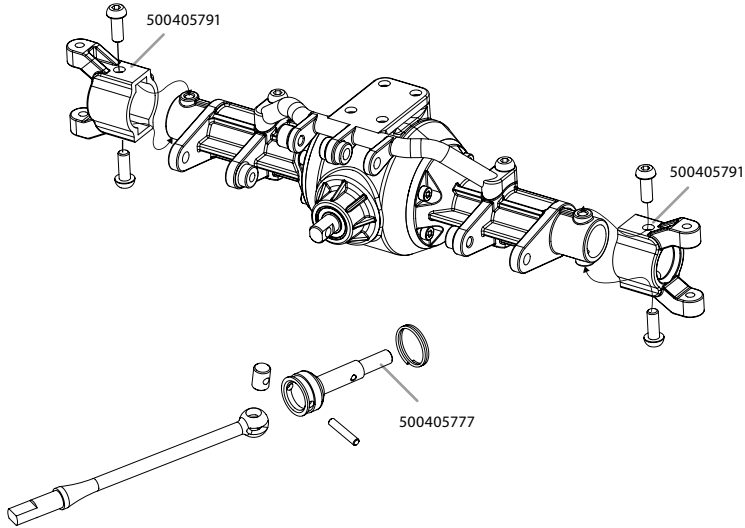



MONTAGE CHASSIS • ASSEMBLING CHASSIS

Montage

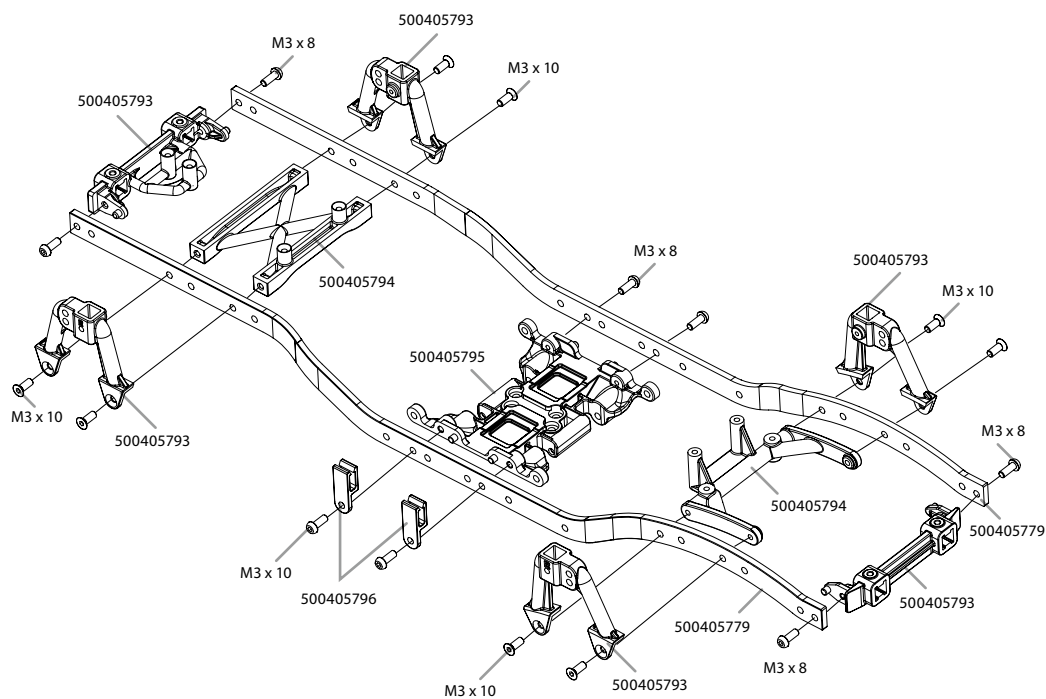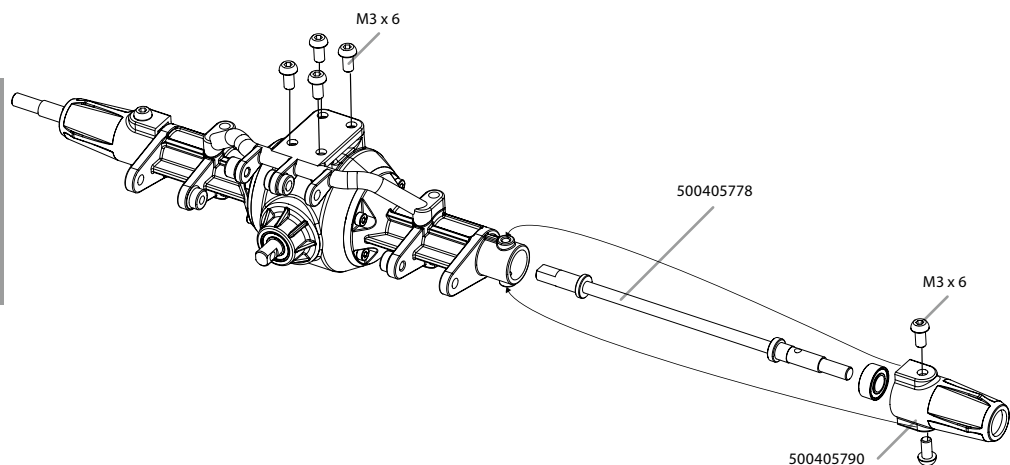


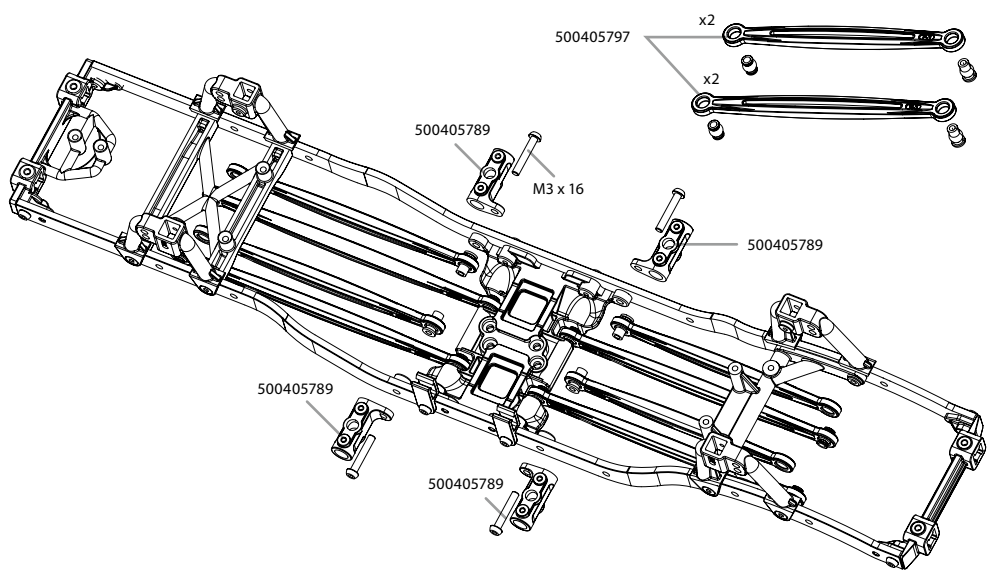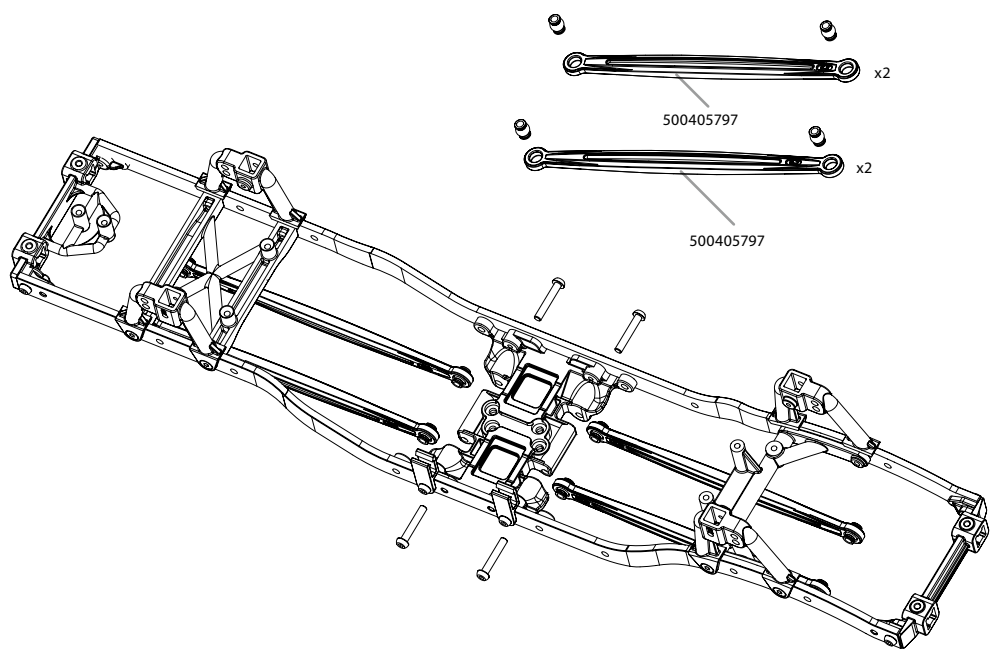


STOSSDÄMPFER • SHOCK ABSORBERS

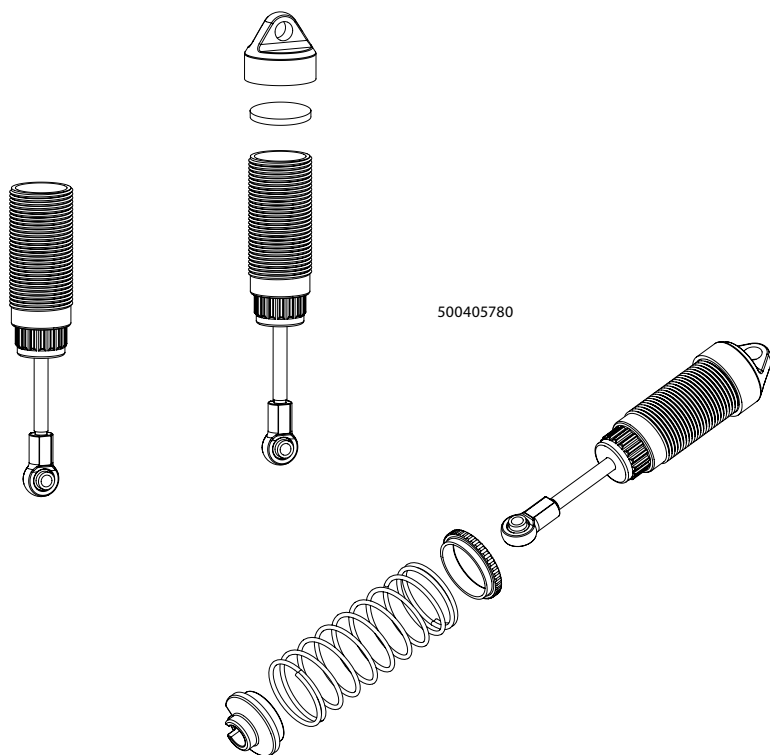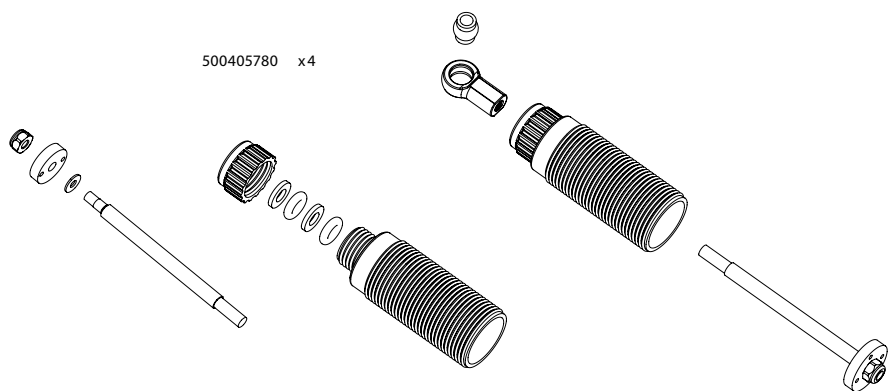



MONTAGE STOSSDÄMPFER VORNE • ASSEMBLING SHOCK ABSORBERS FRONT

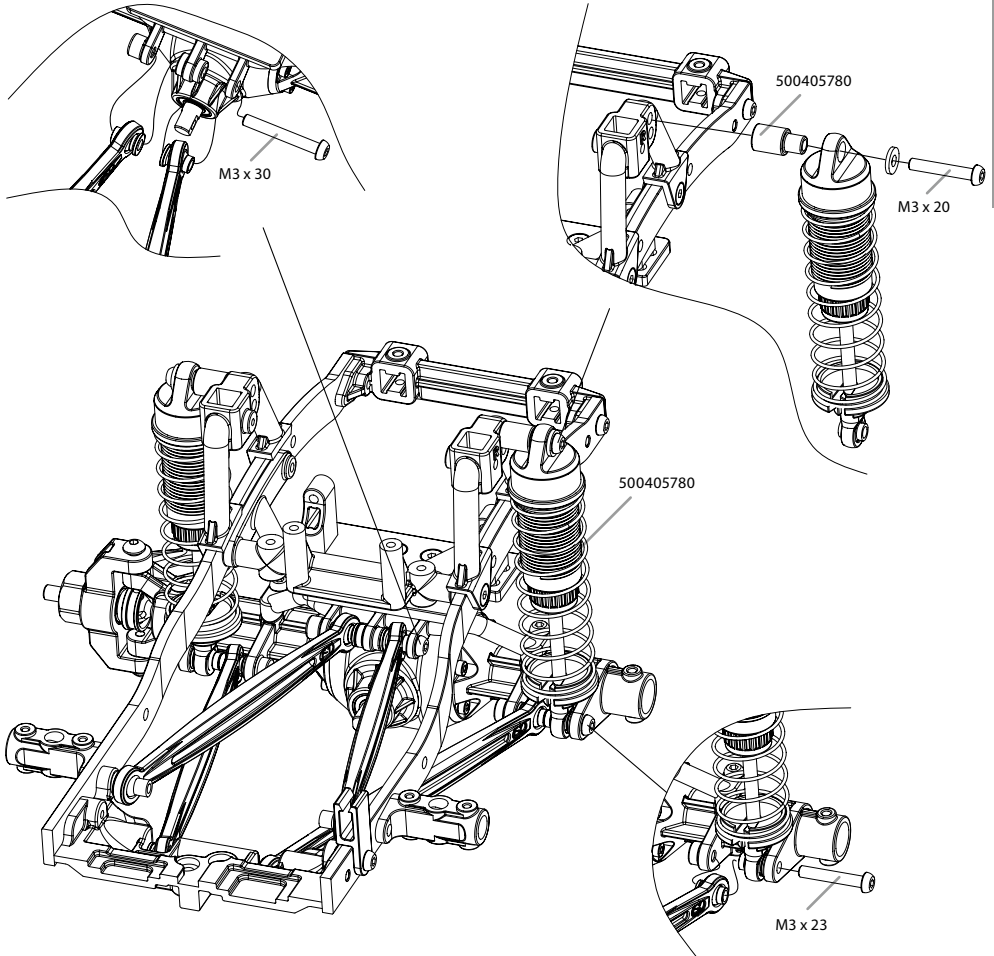





MONTAGE STOSSDÄMPFER HINTEN • ASSEMBLING SHOCK ABSORBERS REAR

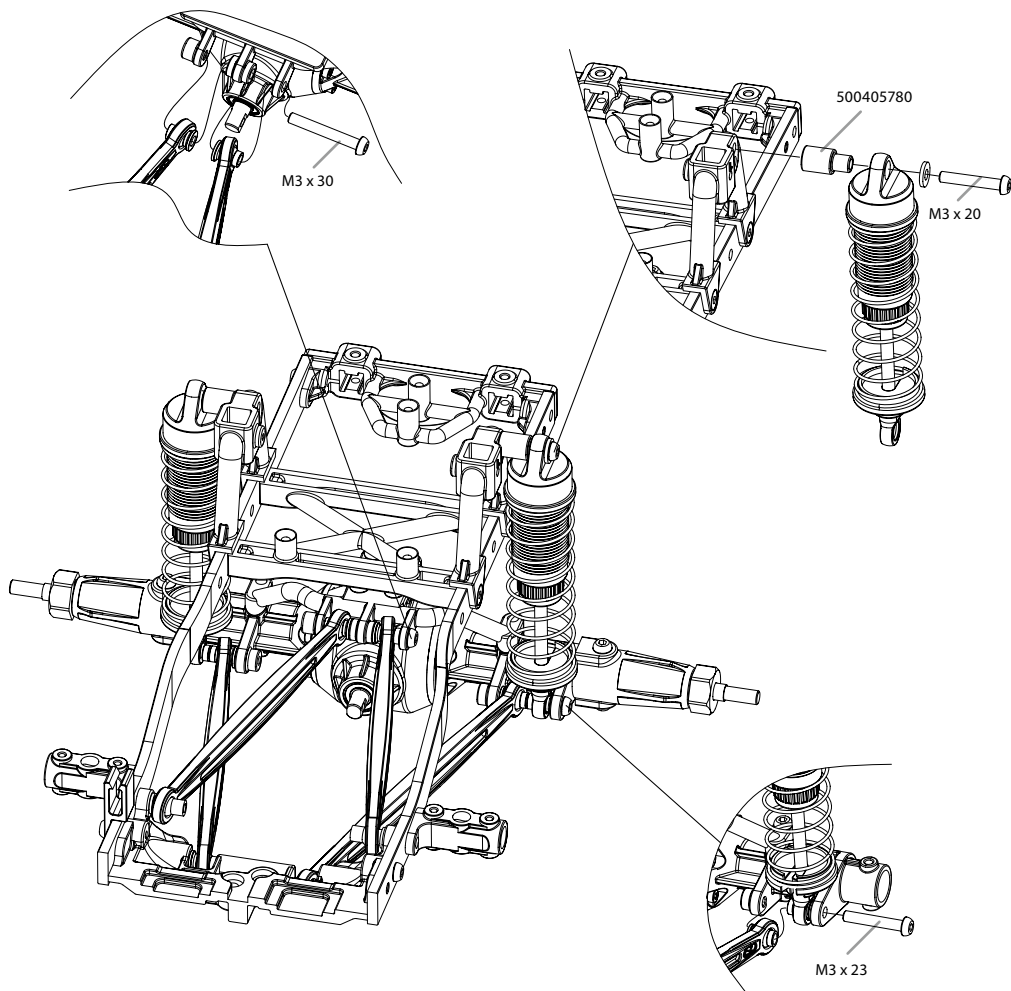


MONTAGE GETRIEBE • ASSEMBLING GEAR

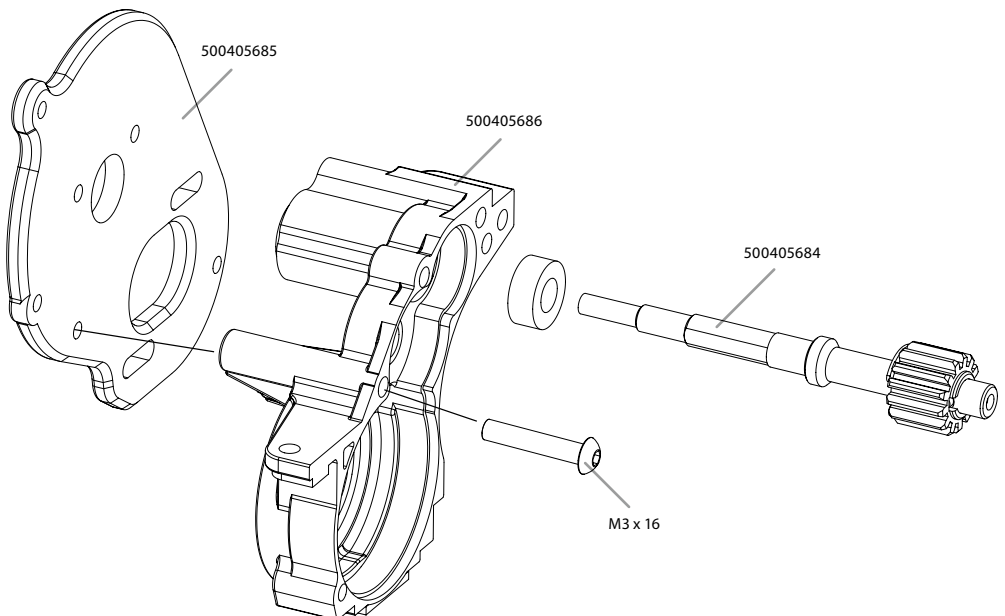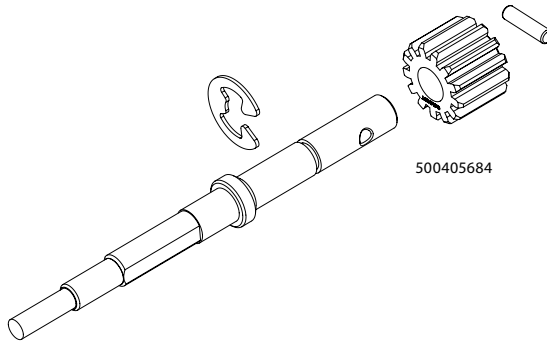


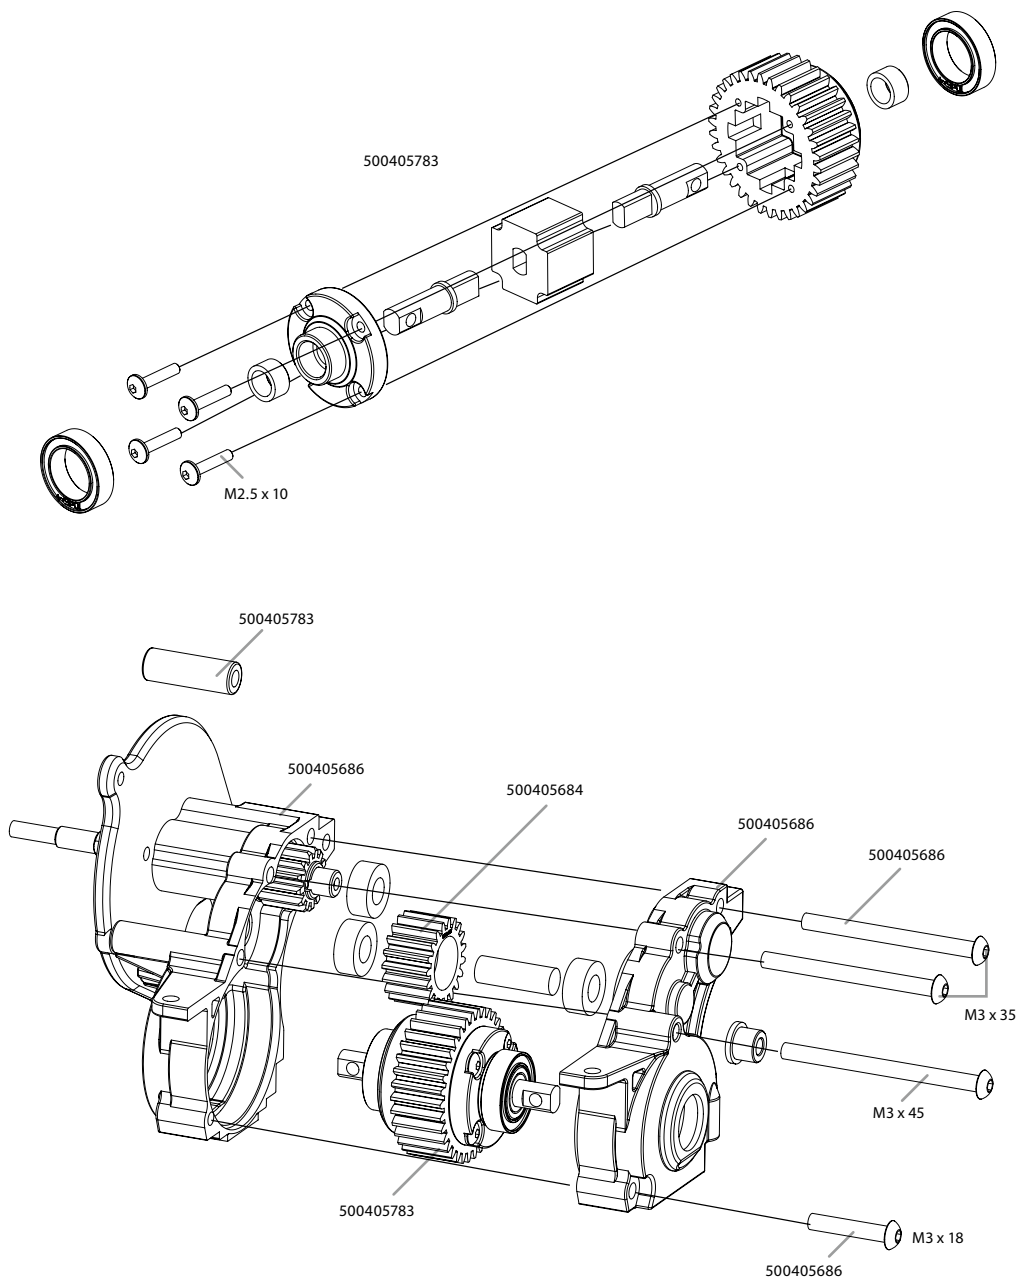


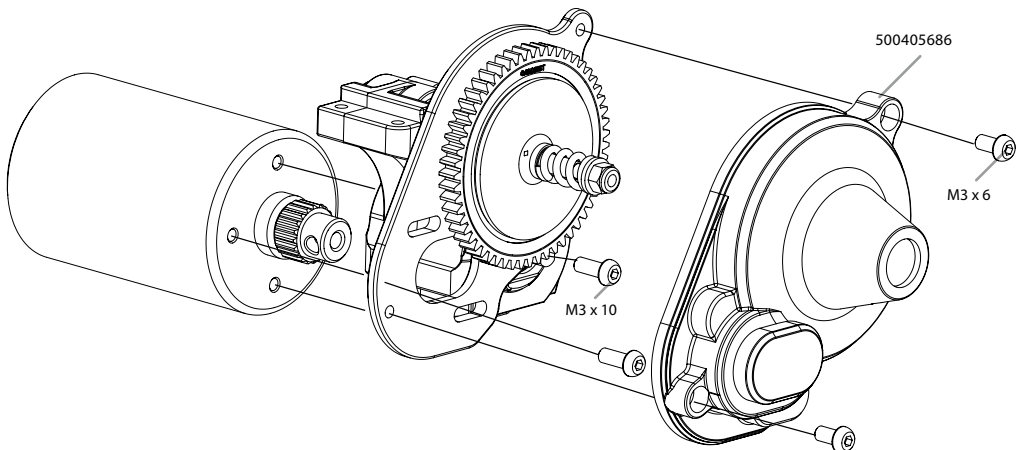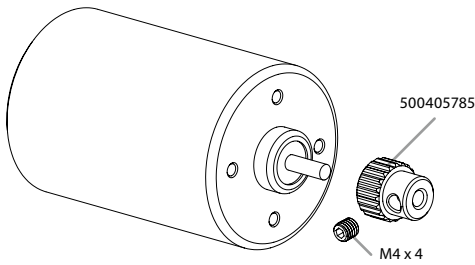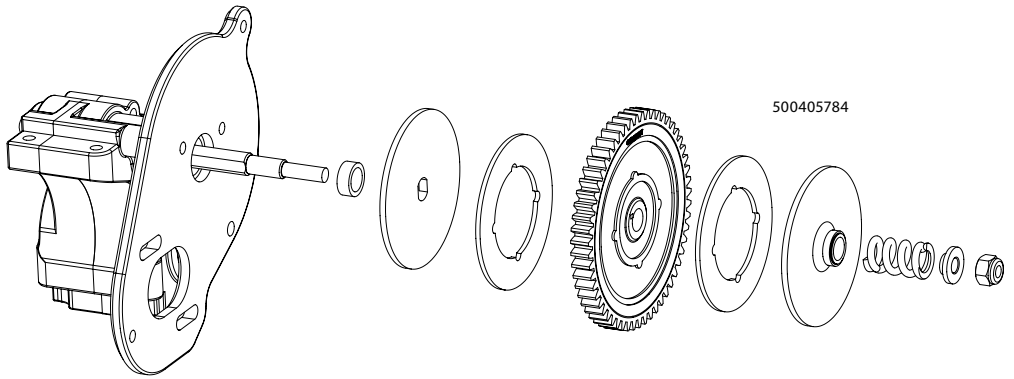

MONTAGE GETRIEBEBLOCK • ASSEMBLING TRANSMISSION BLOCK


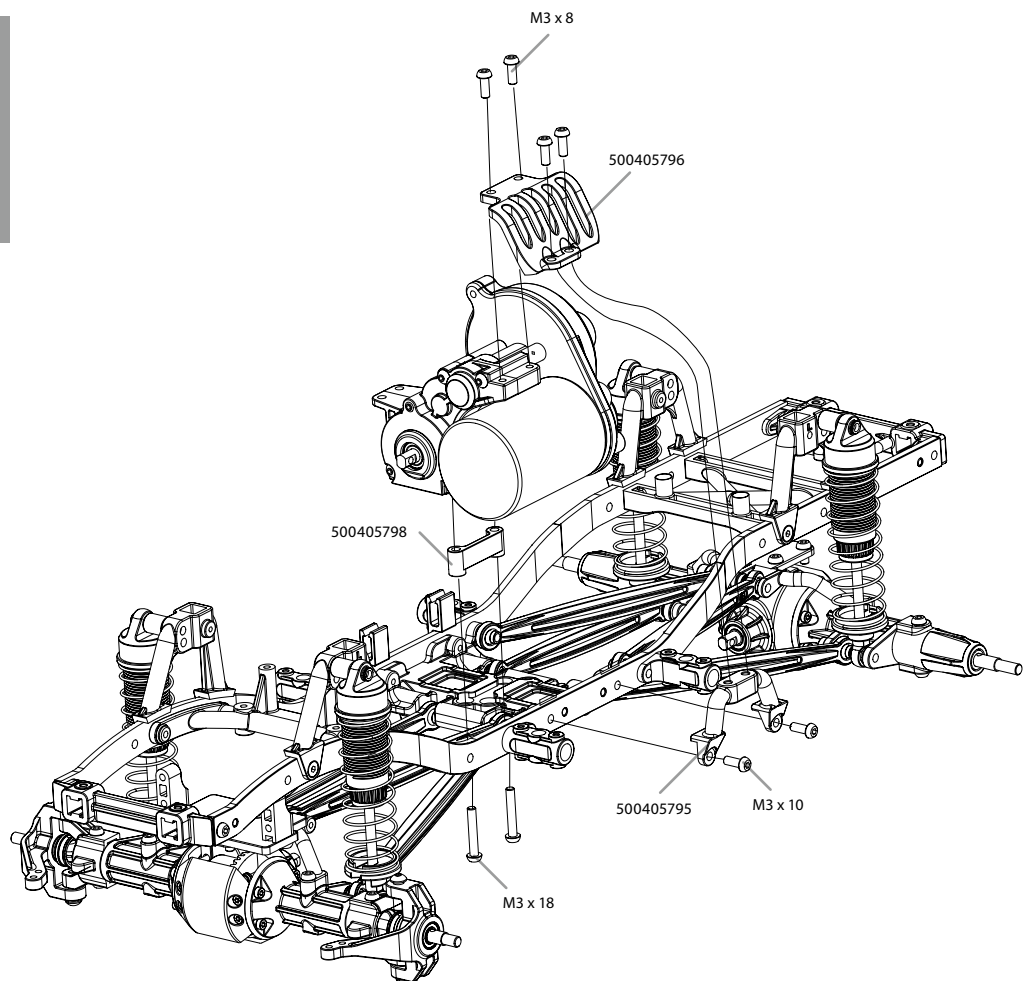


MONTAGE ANTRIBSWELLEN • ASSEMBLING PROPELLER SHAFT

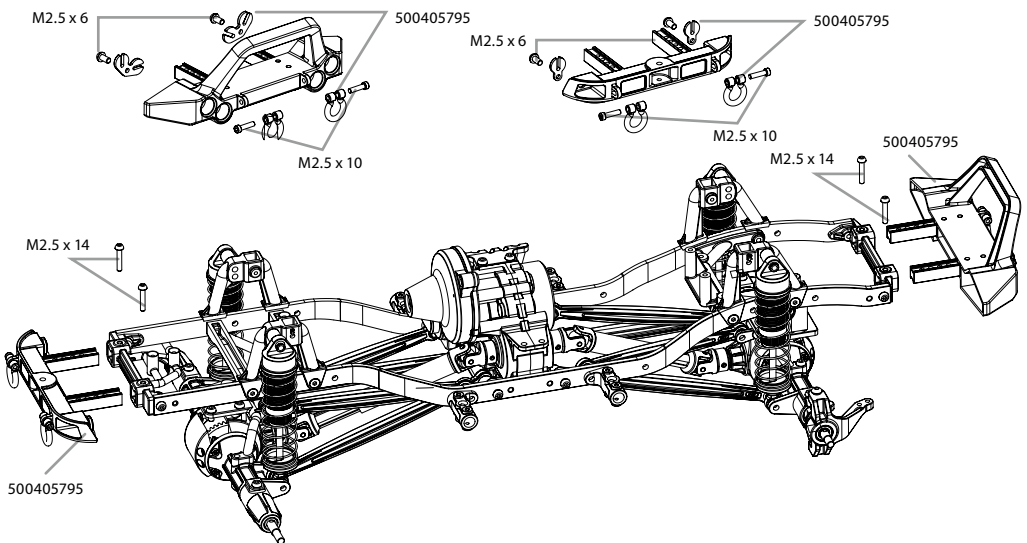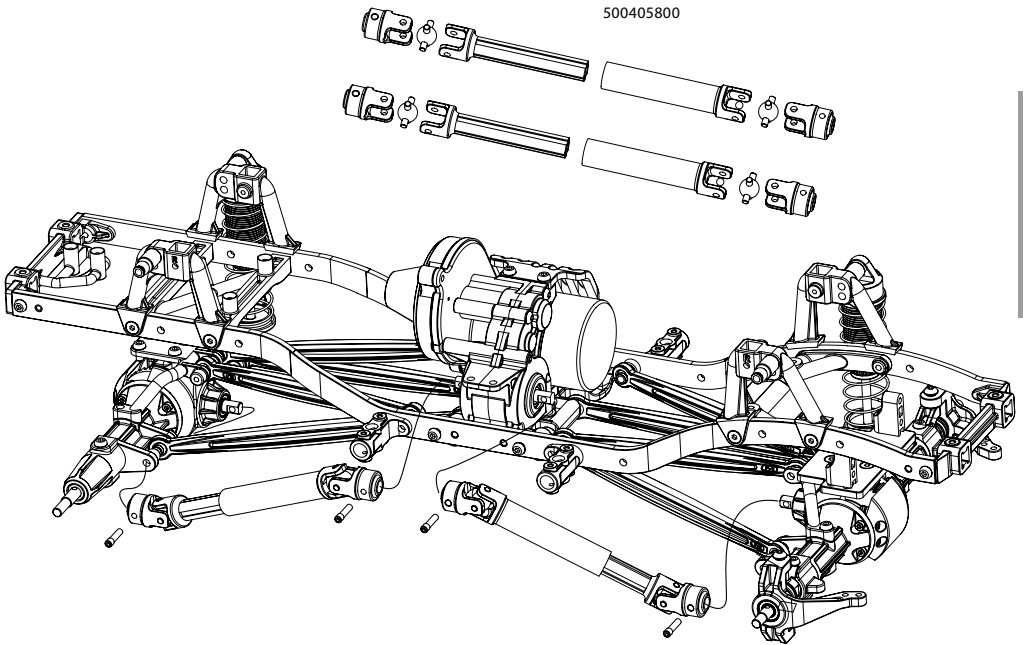



AKKUHALTERUNG • BATTERY MOUNT

Montage

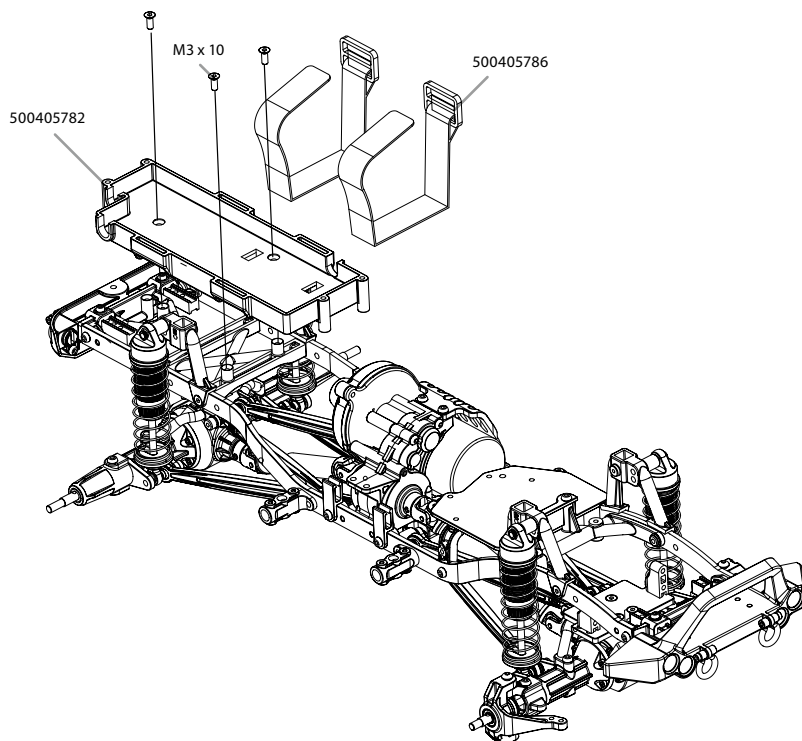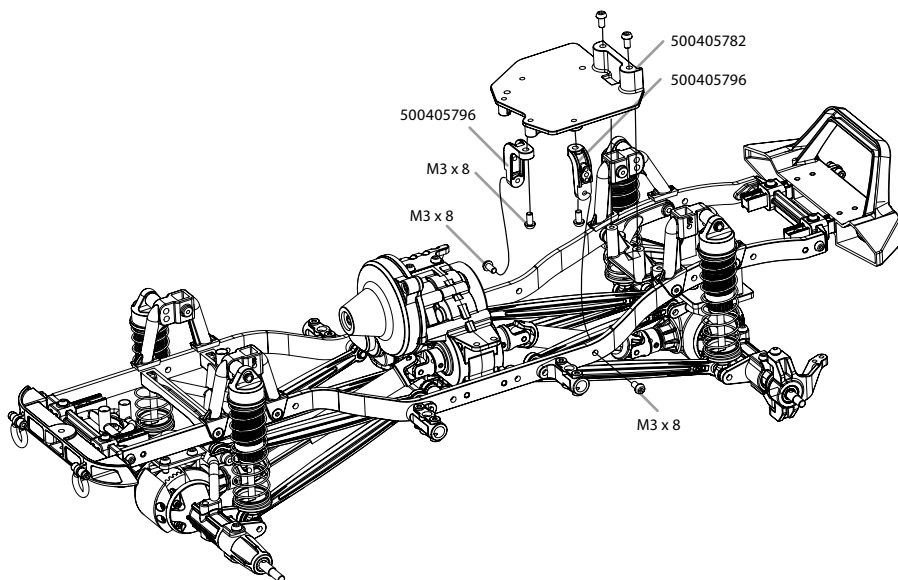

CHASSIS SCHUTZ • CHASSIS PROTECTION

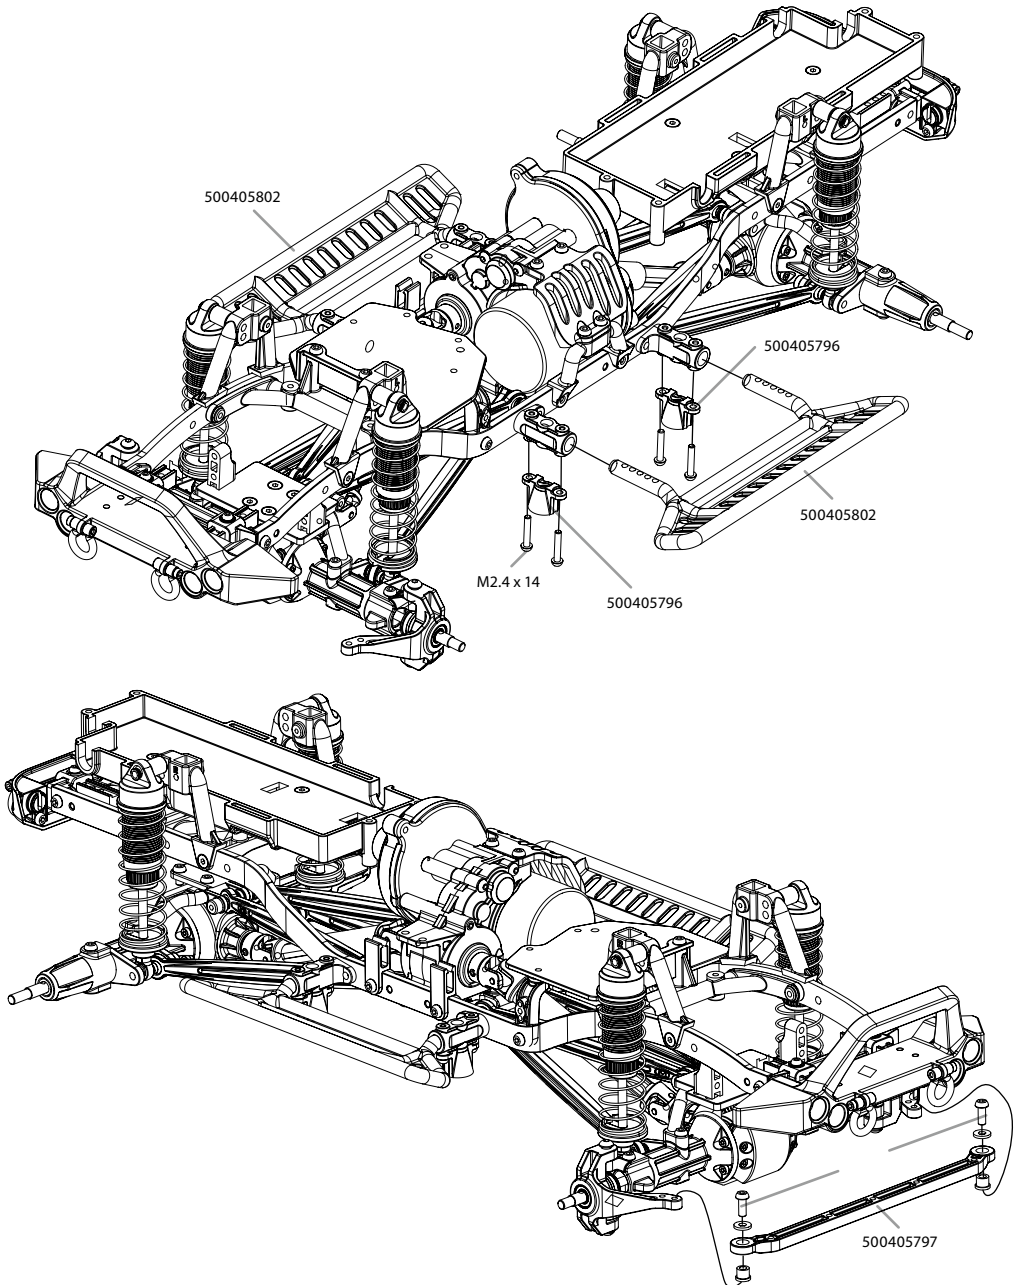

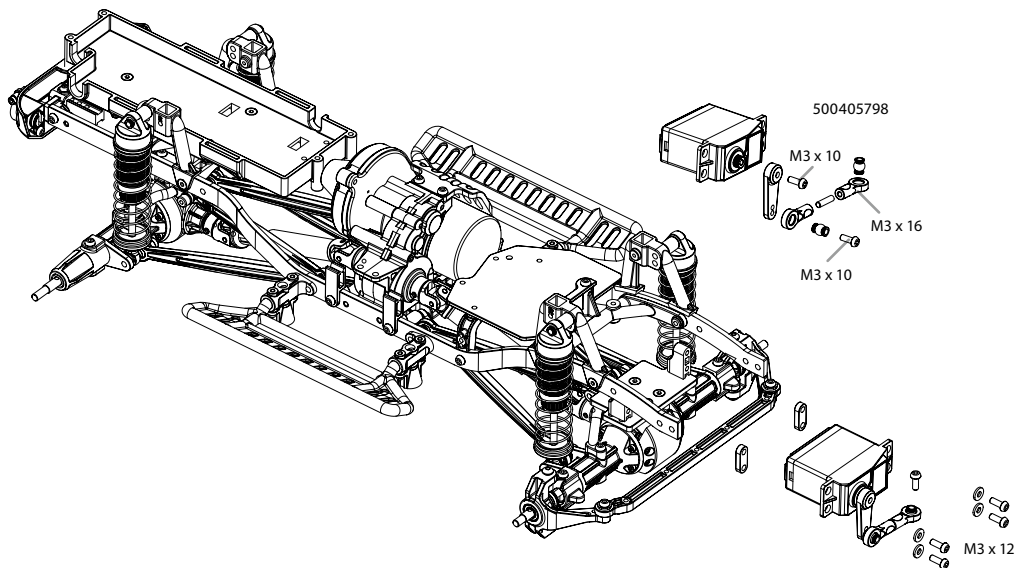

NOTIZEN / NOTES

A series of horizontal dotted lines for taking notes, spanning the width of the page below the header.



TAMIYA-CARSON Modellbau GmbH & Co. KG

Werkstraße 1 // D-90765 Fürth // www.carson-modelsport.de

+49 3675 7333 343

Service-Hotline for Germany: Mo - Do 8.00 - 16.00 Uhr // Fr 8.00 - 13.00 Uhr

CARSON-Model Sport // Abt. Service // Mittlere Mutsch 9 // 96515 Sonneberg